




HOW TO USE YOUR PLAYAWAY

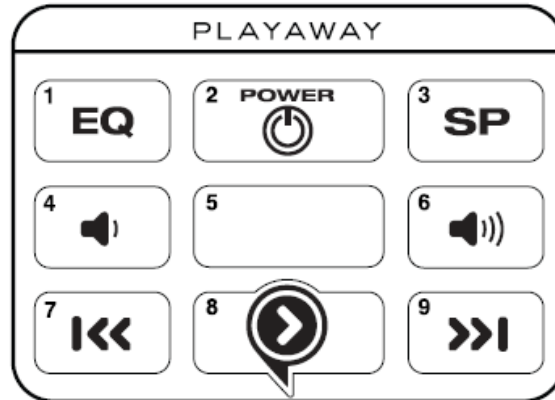


Quick Start

- Press the Power button (button #2 on above diagram). Your Playaway will turn on, paused where you last left off.
- Press the Playaway button (button #8) to start playing. To pause again, press this button once.
- To turn off, press and hold the power button. The LCD screen will count backwards from 3, and when you see OFF, release the button.

Changing the Battery

Playaway holds one AAA battery at the wide base of the unit. One AAA battery typically lasts up to 12 hours. To change the battery, you can open the battery door by pushing firmly (with your thumb or a blunt object such as a dime or pen cap) to pop the cover open.

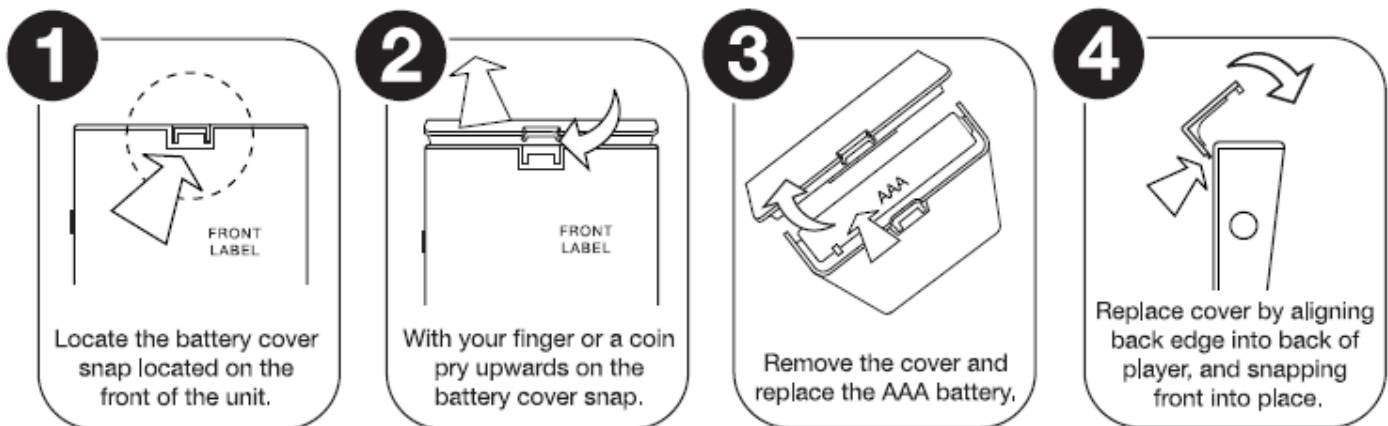

Keypad Tutorial

Equalizer

Press to rotate through the following EQ modes:

- NONE: No EQ setting
- LOUD: Overall sound is boosted
- LOW: Bass is boosted
- HIGH: Treble is boosted
- CLEAR: High end sound is amplified
- HIFI: Sound is mixed for best performance

Power

Press once to turn unit on. Press and hold to power down; release when OFF appears on the LCD screen.

Narrator speed control

Press once to adjust the speed of the narrator's voice. LCD screen displays the three speed levels: SPD (normal), SPD+ (fast), and SPD++ (fastest).

Volume Down

Press once to go down one level, or press and hold to accelerate volume decrease.

LCD Screen

The LCD screen automatically switches between the chapter number and the time remaining the chapter. In its normal playing state, the screen shows the battery icon. At the conclusion of the book, the LCD will display the word END and then automatically shuts off after 10 seconds.

Volume Up

Press once to go up one level or press and hold to accelerate volume increase.

Reverse

Press once to go back an entire chapter or track, or press and hold to rewind within a chapter or track.

Playaway Button

Play: When paused, press once to play.

Pause: When playing, press once to pause.

Forward

Press once to advance one chapter or track, or press and hold to fast forward within a chapter or track.

